

MyToyota App – Remote Climate - Guide





STEP 1

On the home screen, tap on "Start Climate" to open the remote climate settings page.

Remote Climate	(i)
ture	
رالس	
window	
vindow	
Driver	
Passenger	
Driver	
	Remote Climate ture 2005 window vindow Driver Passenger Driver

STEP 2

You can adjust the temperature of the air conditioning and start it immediately or at a pre-set time.



STEP 3

All the climate control features* are shown in the toggle list.

* Availability of the features may vary depending on your model and grade. Please contact your dealer for

more information.



STEP 4

Select the settings and tap "Start Climate".



Full climate control will run for 20 minutes*.



STEP 5

To stop climate control before the timer ends, tap on the "Stop Climate" icon.



STEP 6

Then tap on "Stop Climate".



REMOTE CLIMATE PART 2 – SCHEDULE REMOTE CLIMATE CONTROL



STEP 1

You can schedule your climate control to activate at a specific time.

On the home screen, tap on "Climate Schedule" to open the next screen.

	16:46 Climate Schedule (i)	S
		Ta
	No schedules set	
	Please tap the 'Add New Schedule' button below to set the day and start time you want your vehicle to begin heating or cooling.	
1	Add New Scredule	

STEP 2

Tap "Add a New Schedule".

REMOTE CLIMATE PART 2 – SCHEDULE REMOTE CLIMATE CONTROL

16:46	
<	Add a schedule
0	ne-time Repeat
Start time	31.12.2023 09:40
Temperatur	e
	20°C
*	e
Defrost	
😡 Front win	idow
Rear wind	dow dow
🕠 Mirror	
Heating	
	Save Schedule

STEP 3

Select the desired start time, temperature and settings.

16:46	0 🗢 🗖
<	Add a schedule
	One-time Repeat
Mon Tue	Wed hu Fri Sat Sun
Start time	31.12.2023 09:40
Temperat	cure
*	20°C
Defrost	
Front	window
🚛 Rear v	vindow
😡 Mirror	
	Save Schedule

STEP 4

You can also choose to repeat the schedule later in the week.

REMOTE CLIMATE PART 2 – SCHEDULE REMOTE CLIMATE CONTROL

10.10	0	N
16:46	···· ? ■	STEP 5
<	Add a schedule	
	One-time Repeat	Tap "Save Schedule".
Mon	fue Wed Thu Fri Sat Sun	
Start time	e <u>31.12.2023</u> <u>09:40</u>	
Tempera	ature	
	20°C	
•		
Defrost		
💭 Fron	t window	
🗐 Rear	window	
🖳 Mirro	or 💽	
	Silve Schedule	

16:46		···· ? ■
<	Climate Schedule	(i)
Set the da vehicle to	ay and start time you want begin heating or cooling	your
09:40		
Tue-Wed		
12:45		
Mon		
	Add A New Schedule	

STEP 6

The "Climate Schedule" page shows all schedules.

REMOTE CLIMATE PART 2 – EDIT & DELETE A CLIMATE CONTROL SCHEDULE



STEP 1

On the home screen, tap on "Climate Schedule" to open the next screen.



STEP 2

Select the schedule to edit.

REMOTE CLIMATE PART 2 – EDIT & DELETE A CLIMATE CONTROL SCHEDULE

16:46	····· 🗢 🔳
<	Add a schedule
0	ne-time Repeat
Start time	31.12.2023 08:20
Temperatur	re
18°C	
*	(2)
Defrost	
💭 Front wir	ndow
🛱 Rear win	dow
🕠 Mirror	
	Save Schedule
	Dele

STEP 3

Make the desired changes and tap on "Save Schedule".

16:46		?■
<	Add a schedule	
C	One-time Repeat	
Start time	31.12.2023	3:20
Temperatu	re	
18°C		
<u>ه-ر-</u>		-8
Defrost		
💭 Front wi	ndow	
Rear wir	ndow	
😡 Mirror	(
	Save Schedule	
	Delete Schedule	\supset

STEP 4

To delete a schedule, tap "Delete schedule".

REMOTE CLIMATE PART 2 – EDIT & DELETE A CLIMATE CONTROL SCHEDULE



STEP 5

The "Climate Schedule" page shows Remaining schedules, if any.



EVERY FEATURE COUNTS